
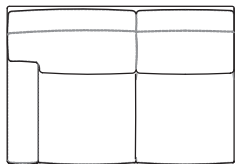
 **4513 Vancouver Sofa**  
 H37 W94 D43  
 Seat: H21½ W78 D24  
 Arm: H23½

Also Available:


**4512 Vancouver Loveseat**  
 H37 W68 D43  
 Seat: H21½ W52 D24  
 Arm: H23½

 **4511 Vancouver Chair**  
 H37 W42 D43  
 Seat: H21½ W25½ D24  
 Arm: H23½


**4510 Vancouver Ottoman**  
 H18½ W28 D28




**4512-LAF Vancouver Left Arm Facing Loveseat**  
 Overall: H37 W61 D43  
 Inside: W52 D24  
 Seat: H21½ Arm: H23½

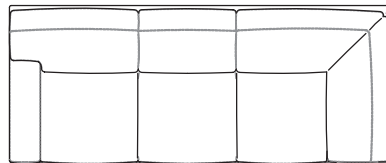

**4514-LAF Vancouver Left Arm Facing Sofa with Built-In Corner**  
 Overall: H37 W102 D43  
 Inside: W76 D24  
 Seat: H21½ Arm: H23½

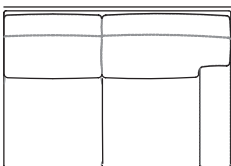

**4512-RAF Vancouver Right Arm Facing Loveseat**  
 Overall: H37 W61 D43  
 Inside: W52 D24  
 Seat: H21½ Arm: H23½

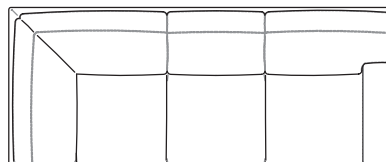

**4514-RAF Vancouver Right Arm Facing Sofa with Built-In Corner**  
 Overall: H37 W102 D43  
 Inside: W76 D24  
 Seat: H21½ Arm: H23½





# Vancouver Sectional




4514-LAF Vancouver Left Arm Facing Sofa with Built-In Corner

4512-RAF Vancouver Right Arm Facing Loveseat


As Shown:

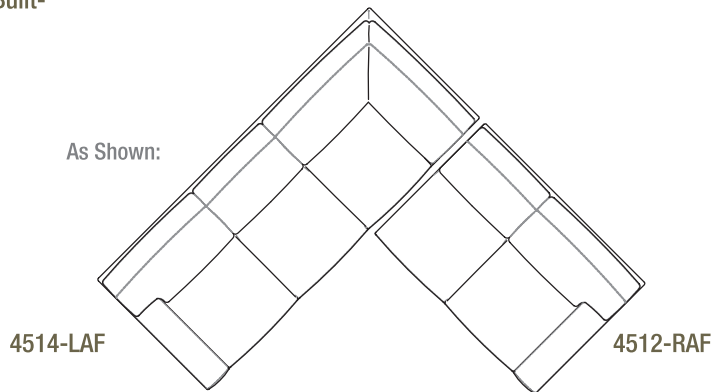


**4511-A Vancouver Armless Chair**  
Overall: H37 W26½ D43  
Inside: W26½ D24  
Seat: H21½

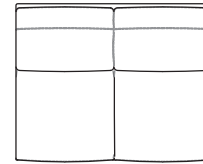


**4512-A Vancouver Armless Loveseat**  
Overall: H37 W52½ D43  
Inside: W52½ D24  
Seat: H21½

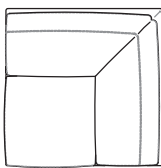


**4511-C Vancouver Corner Chair**  
Overall: H37 W42 D43  
Inside: W24 D24  
Seat: H21½

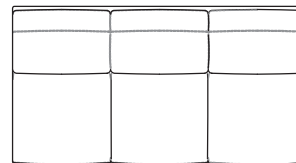


**4513-A Vancouver Armless Sofa**  
Overall: H37 W78½ D43  
Inside: W78½ D24  
Seat: H21½

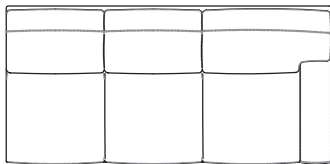


**4513-RAF Vancouver Right Arm Facing Sofa**  
Overall: H37 W87 D43  
Inside: W78 D24  
Seat: H21½ Arm: H23½

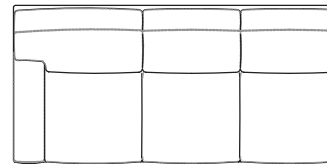

**4513-LAF Vancouver Left Arm Facing Sofa**  
Overall: H37 W87 D43  
Inside: W78 D24  
Seat: H21½ Arm: H23½

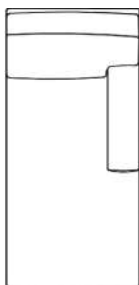

**4511-RAF Vancouver Right Arm Facing Chaise**  
Overall: H37 W34 D72  
Inside: W26 D54  
Seat: H21½ Arm: H23½

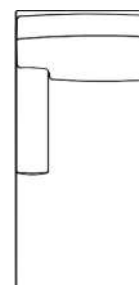

**4511-LAF Vancouver Left Arm Facing Chaise**  
Overall: H37 W34 D72  
Inside: W26 D54  
Seat: H21½ Arm: H23½

Scale: ¼" = 1'