




# Vancouver Sectional


As Shown:

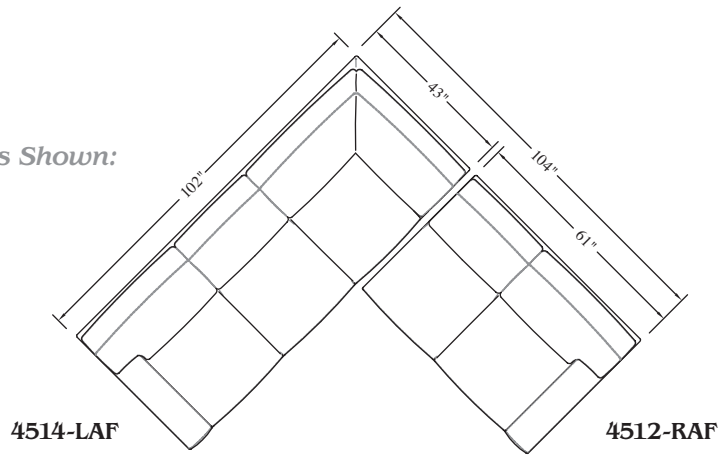


**4511-A Vancouver Armless Chair**  
Overall: H37 W26½ D43  
Inside: W26½ D24  
Seat: H21½

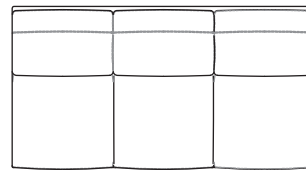


**4513-A Vancouver Armless Sofa**  
Overall: H37 W78½ D43  
Inside: W78½ D24  
Seat: H21½

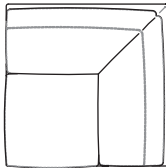


**4511-C Vancouver Corner Chair**  
Overall: H37 W42 D43  
Inside: W24 D24  
Seat: H21½

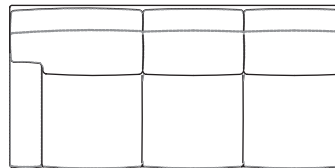


**4513-LAF Vancouver Left Arm Facing Sofa**  
Overall: H37 W87 D43  
Inside: W78 D24  
Seat: H21½  
Arm: H23½

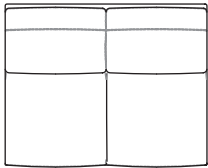


**4512-A Vancouver Armless Loveseat**  
Overall: H37 W52½ D43  
Inside: W52½ D24  
Seat: H21½

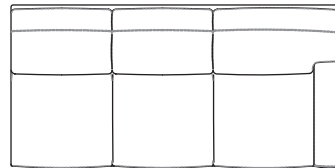


**4513-RAF Vancouver Right Arm Facing Sofa**  
Overall: H37 W87 D43  
Inside: W78 D24  
Seat: H21½  
Arm: H23½

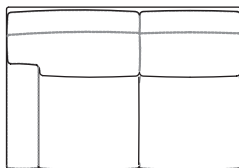


**4512-LAF Vancouver Left Arm Facing Loveseat**  
Overall: H37 W61 D43  
Inside: W52 D24  
Seat: H21½  
Arm: H23½

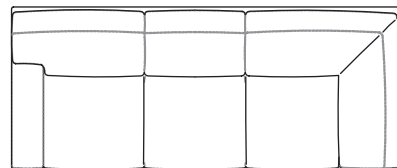

**4514-LAF Vancouver Left Arm Facing Sofa with Built-in Corner**  
Overall: H37 W102 D43  
Inside: W76 D24  
Seat: H21½  
Arm: H23½

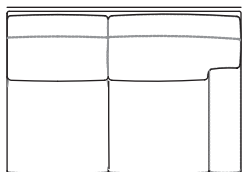

**4512-RAF Vancouver Right Arm Facing Loveseat**  
Overall: H37 W61 D43  
Inside: W52 D24  
Seat: H21½  
Arm: H23½

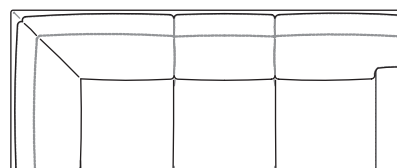

**4514-RAF Vancouver Right Arm Facing Sofa with Built-in Corner**  
Overall: H37 W102 D43  
Inside: W76 D24  
Seat: H21½  
Arm: H23½

Scale: ¼" = 1'